


REFEX™ System for Ultra Pure Water pH Measurement

The REFEX Ultra Pure Water pH System is designed to give reliable, continuous real time measurement of water quality in water purification and distribution systems. Designed to be operated as a side steam, the system is supplied complete with a purpose built flowcell assembly that houses the measurement electrodes.


Germany

REFEX reference and glass pH electrodes are provided. The robust "jumbo" reference sensor uses a highly stable non-porous polymeric interface instead of a traditional porous liquid junction as used by all conventional reference electrodes. The non-porous nature of the electrode interface prevents the loss of electrolyte into the flow stream, preventing the rapid degradation of the measurement and greatly reducing maintenance overhead and costly frequent replacement of "consumable" probes.

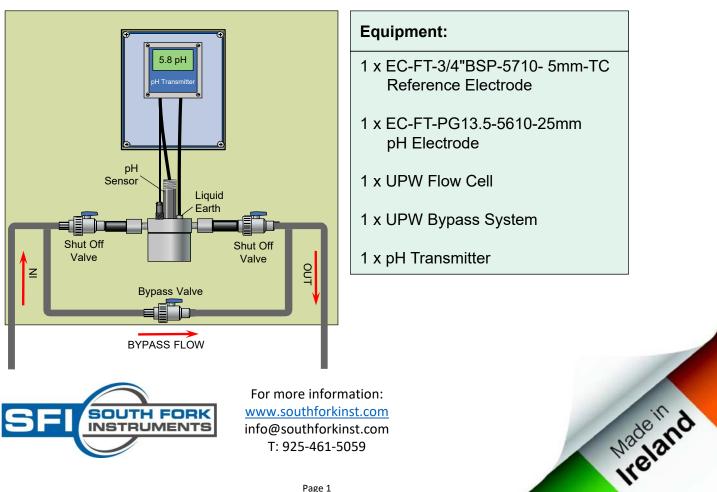

REFEX Stainless Steel Flow Cell for Ultra Pure Water pH Measurement




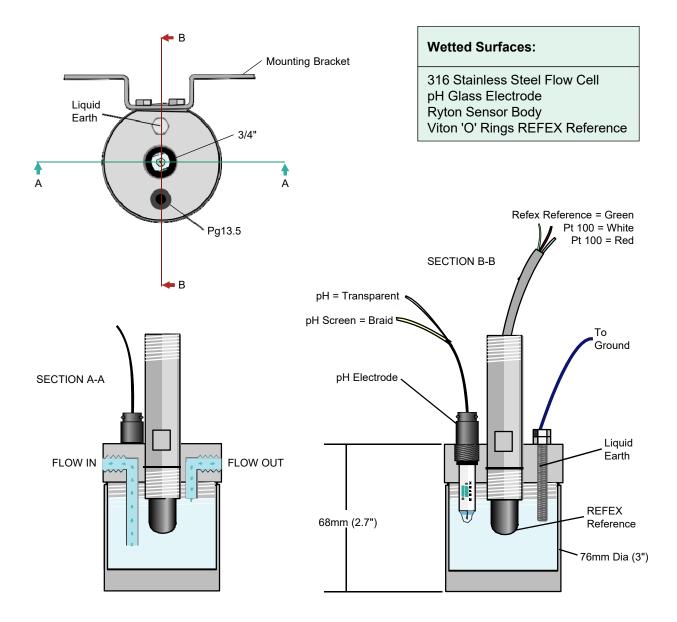

For more information: <u>www.southforkinst.com</u> info@southforkinst.com T: 925-461-5059




REFEX Electrodes for Pure Water pH Measurement

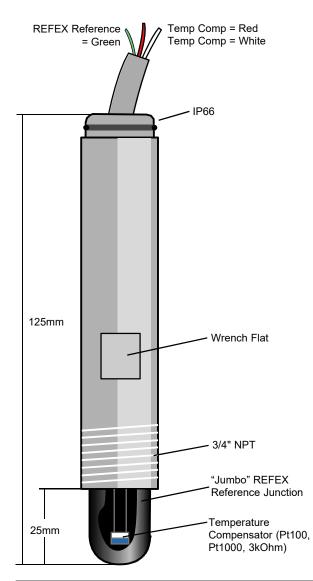

pH Glass Electrode	
pH Range	0 - 12
Temp Range	0 - 100 DegC
Process Fitting	PG 13.5
Cable Options	1m/3m/5m/10m (Please Specify)
Part No.	EC-FT-PG13.5-5610-25mm



REFEX "Jumbo" Reference Electrode:	
Temp Range	0 - 100 DegC
Impedance	<100 kΩ
Process Fitting	³ ⁄ ₄ " NPT
Cable Options	Pt100, Pt1000, 3kΩ (please specify)
T.C. Options	EC-FT-PG13.5-5610-25mm
Wetted Surfaces	REFEX Reference, Ryton Body, Viton 'O' Ring
Part No.	EC-FT-3/4"NPT-5710-25mm

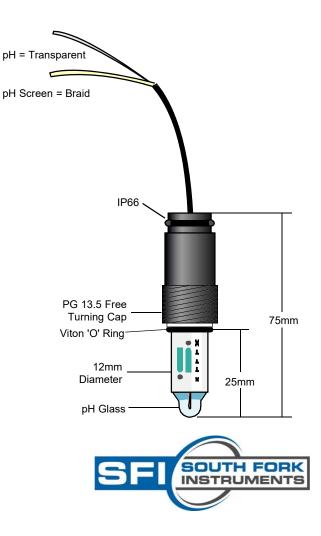



Applications: In-Line and Immersion Systems

- Potable Water Applications
- Optimized Coagulation
- Low Ionic Raw Water and Ultra Pure Water (UPW)
- All Oil & Gas Sour Water
- All Petrochemical Process Water
- · Chlor-Alkali Chlorinated and Waste Brines
- Food and Beverage CIP and SIP
- Industrial Waste Water
- Waste Water Treatment
- Heavy Metal Processes
- Pulp and Paper

Advantages of Refex Non Porous Electrodes

- Protected Ag/AgCI reference half cell REFEX barrier/interface prevents all liquid contact/exchange
- Resistant to fouling and poisoning
- Suitable for temperatures between 0...100°C
- Operates in pressures between full vacuum and 20 bar / 290 psi
- Instantaneous response to pH change
- Constant Eo zero almost maintenance free
- Long electrode life many times longer than all others
- Compatible with all modern pH instruments with dual high impedance inputs for pH and reference electrodes.
- · No diffusion potential errors in low ionic waters
- No electrolyte refilling sealed for life

For more information: www.southforkinst.com info@southforkinst.com T: 925-461-5059

